

# 90-DAY



## MAINTENANCE CHECKLIST

FOR TRONAIR JACKS

1

Operate the jack, raising and lowering it completely three times.

Thoroughly check the hydraulic system for leaks.

2

3

Inspect the airplane jack structure for any potential corrosion and/or excessive wear.

Inspect the fluid level with the rams fully retracted.

4

5

Extend rams and visually inspect for corrosion, foreign matter and excessive wear.

If equipped, check the air pump, referencing the air pump service manual.

6

7

Look over the paint condition.

Lubricate the threaded ram with DoAll, RPM, LPS or an equivalent water repellant that is Buna N compatible.

8

9

Open the release valve and verify that the rams fully retract with a load of about 50 lbs. or less.

Lubricate the casters.

10

**TRONAIR®**

tronair.com

